



## CT70 Rider Quick Guide

This Guide is intended for quick consultation only and does not replace the Use and Maintenance Manual. Before using the machine, read the Use and Maintenance Manual contained in the machine packaging thoroughly and rigorously respect all the instructions.

### PREPARATION/ OPERATION


1. Fill the detergent tank.




2. Turn the ignition key to switch the machine on.




3. Press the brush button to activate operation of the head and suction motor.

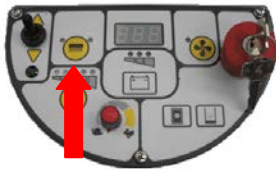

4. Press the suction motor button to disable suction if you want to prewash the surface.

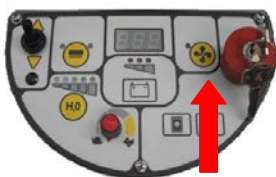

5. Press the "H2O" button for at least 2 seconds to enable detergent flow. Set the type of detergent flow (MANUAL or AUTOMATIC) on the machine's software (see the Use and Maintenance Manual)

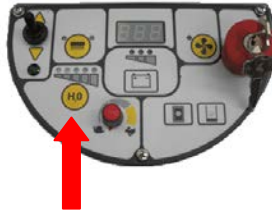

6. Choose the direction of movement by moving the direction selector



7. Turn the potentiometer to set work speed.




8. Operate the accelerator



9. Begin working.

10. When you have finished cleaning, proceed as follows:
- Turn the brush motor off.
  - Stop the detergent flow
  - Turn the suction motor off.
  - Press the emergency button
  - If necessary, charge the batteries.

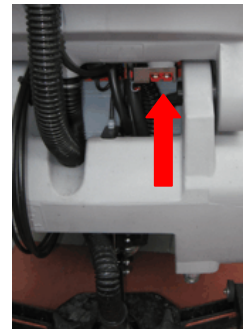

### DAILY MAINTENANCE

Empty the dirty water drum through the drain hose.



Clean the dirty water drum.



Check the suction filter is undamaged and clean.



Check the detergent output filter is undamaged and clean.



Check the battery charge.




Check the detergent tank fill filter is undamaged and clean.




Clean the brushes.



To recharge, plug in the battery charger connector

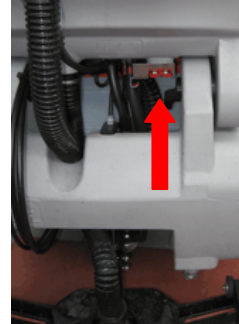

Check the squeegee is clean and the blades are not damaged.

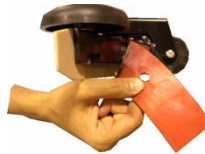

## REPLACING THE SQUEEGEE BLADES

- release the clip;
- remove the two blade retainers by pushing them towards the outside of the squeegee then extracting them;
- remove the blade;
- reuse the same blade by reversing the edge in contact with the floor until all four edges are worn out, or replace with a new blade, fitting it onto the screws on the body of the squeegee;
- reposition the two blade retainers by centring the widest part of the slots over the fixing screws on the squeegee body, then pushing the blade retainers inwards;
- fasten the clip.



## MANUAL BRUSH ATTACHMENT

Position the brushes under the head drive disk. Lift the right brush with your hands and turn it anticlockwise, locking it in position on the drive disk. Lift the left brush with your hands and turn it clockwise, locking it in position on the drive disk.

## AUTOMATIC BRUSH RELEASE

Stop the brushes and the suction motor by pressing the brush and suction motor buttons. Hold the automatic release button down for at least five seconds and the machine releases the brushes from the head automatically.

## TROUBLESHOOTING

THE MACHINE DOES NOT COME ON/START UP	CHECK THE EMERGENCY BUTTON IS NOT PRESSED
	CHECK THE BATTERY CHARGE
THE SUCTION MOTOR DOES NOT WORK	CHECK THE DIRTY WATER DRUM IS NOT FULL
	CHECK THE DIRTY WATER DRUM LEVEL SENSOR IS NOT BLOCKED/MALFUNCTIONING
THE MACHINE LEAVES THE FLOOR WET	CHECK THE SQUEEGEE BLADES ARE NOT WORN
	CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES
	CHECK THERE IS NO DEBRIS IN THE SUCTION HOSE
	CHECK THE SUCTION FILTER IS UNDAMAGED AND CLEAN
	CHECK THE DIRTY WATER DRUM LID SEAL IS UNDAMAGED.
THE MACHINE LEAVES THE FLOOR DIRTY	CHECK THE SUCTION HOSE IS CORRECTLY ATTACHED TO THE SQUEEGEE
	CHECK THE TYPE OF BRUSH/PAD IN USE IS SUITABLE FOR THE TYPE OF DIRT AND FLOOR.
THE MACHINE LEAVES STRIPES OF WET FLOOR	CHECK THE FLOOR HAS BEEN BRUSHED BEFORE USING THE MACHINE
	CHECK THERE IS NO DEBRIS BETWEEN THE TWO SQUEEGEE BLADES
	CHECK THE SQUEEGEE BLADES ARE NOT WORN
	CHECK THE SQUEEGEE IS CORRECTLY ADJUSTED